




rammount.com
1.800.497.7479
support@rammount.com

RAM® Locking Knob


Locking and Unlocking

To adjust double socket arm, unlock knob with locking knob key and loosen by rotating counter-clockwise. When double socket arm and bases are adjusted to desired position, rotate knob clockwise to tighten. Turn key clockwise to lock.

Locking

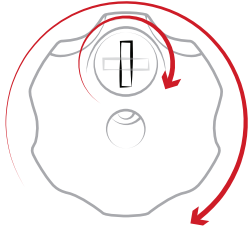


Unlocking

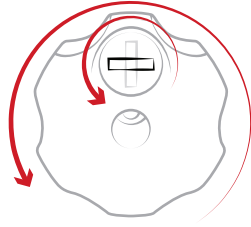

Note

When knob is locked, you should be able to spin the knob freely without loosening the double socket arm.

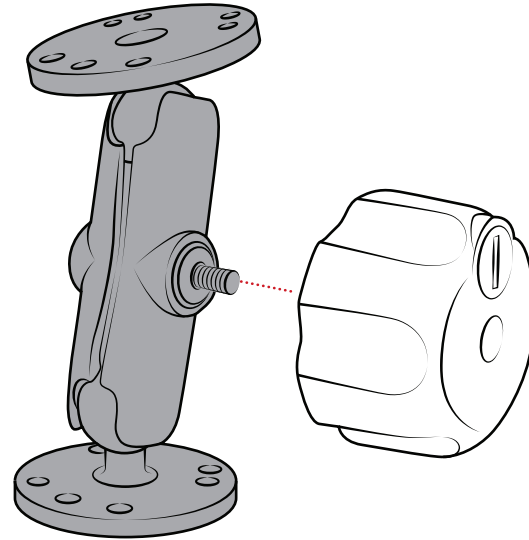

RMR-INS-101-L