

**Item Number** \_\_\_\_\_

RAM-VB-136 & RAM-VB-136-SW1

# RAM No-Drill™ Seat Bases

RAM Mounting Systems



RAM-VB-136-SW1



RAM-VB-136



## SPECIFICATIONS

**Placement**

Attaches between seat frame and floor board. Uses front and rear, inside seat studs.

**Drilling Required**

No - uses existing seat bolts

**Seat Configuration**

Bucket

**Construction/Finish**

Steel/Black Powdercoat

**Pole or Pedestal**

Included on Base

**Weight**

6.1 lbs.

**Dimensions**

A = 14.57", B = 7.25", C = 17.75"

Hole Center = 12.625"

**Features**

Installs in minutes with no drilling required

**Misc.**

Rock solid construction

Lifetime warranty

**RAM Mounting Systems**

8410 Dallas Ave S

Seattle, WA 98108

Phone: (206) 763-8361

Fax: (206) 763-9615

www.rammount.com

support@rammount.com

RMR-INS-VB-136

**Item Number** \_\_\_\_\_

RAM-VB-136 & RAM-VB-136-SW1

**RAM No-Drill™ Seat Bases**  
RAM Mounting Systems

**INSTALLATION INSTRUCTIONS**

1. Loosen the front door side and rear door side nuts holding the passenger side seat to the floor board.
2. Remove the front drivers side and rear drivers side nuts holding the passenger seat to the floor board.
3. Prior to lifting the drivers side of the passenger seat upward, note the placement of the seat belt anchor. This is sometimes located at the inner rear seat frame where it uses the seat stud to hold it in place. If this is the case for your vehicle, be sure to reposition the seat belt anchor as was done by the factory.
4. Lift the drivers side of the passenger seat upward enough to clear the seat frame studs projecting upward from the floor board.
5. Place the No-Drill™ base in between the seat frame and seat studs and align the holes in the base with those of the base.
6. Once aligned, lower the seat frame back into place, check placement of seat belt anchor, and re-install and fully tighten all four of the nuts securing the seat to the floor board.

**RAM Mounting Systems**  
8410 Dallas Ave S  
Seattle, WA 98108  
Phone: (206) 763-8361  
Fax: (206) 763-9615  
www.rammount.com  
support@rammount.com



RMR-INS-VB-136