RAM No-Drill™ Seat Bases

RAM-VB-167 & RAM-VB-167-SW1

RAM Mounting Systems

SPECIFICATIONS

Placement

Passenger side on the floor, under front seat

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Pole or Pedestal

Purchased Separately

Weight

4 lbs.

Dimensions

 
A = 17.44", B = 9", C = 2.12" Hole Center = 16.44"

Features

Installs in minutes with no drilling required Minimal intrusion into passenger leg space Lifetime warranty



Complete Vehicle Mount RAM-VB-167-SW1



Vehicle Base RAM-VB-167

RAM Mounting Systems

8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com



RMR-INS-VB-167

INSTALLATION INSTRUCTIONS

Depending on the vehicle trim level, there may be plastic covers over the seat frame legs where these meet the floor. If this is the case in your vehicle, carefully remove the trim and store it so it can be replaced when the base is later removed.

- 1. Slide the seat to its rear most position.
- 2. Remove the two front seat leg bolts using the appropriate wrench. A 13mm socket is common.
- 3. Place the mounting base over the seat frame legs and align the holes.
- 4. Pass the factory bolts through the holes in the base and start the thread of the seat bolts by hand.
- 5. Complete the installation by using the wrench to fully tighten the seat leg bolts.
- 6. After a week of use, check seat leg bolts and re-tighten if necessary.



RAM Mounting Systems

8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com



RMR-INS-VB-167