 


Parts Index

* not to scale







(16) Adhesive Pads

 


(1) USB-C Cable

Style may vary



(1) Cable Cover



rammount.com/ip


Patented & Pats. Pend.

Ε (1) Hand Strap


WARNING: If you are using a tablet with a case, tablet cannot be removed from case unless GDS® Tab-Conn™ is fully disassembled and removed from tablet.

How to Assemble


- If you are using a case, ensure tablet is properly installed in the case and that the back of your case is thoroughly cleaned. If you are not using a case, ensure the back of your tablet is thoroughly cleaned.
- Adhere one side of all (B) Adhesive Pads to the inside cavities of the (A) Tab-Conn™.

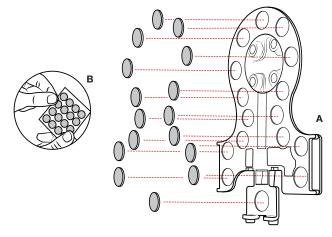


Carefully peel away remaining film from each (B) Adhesive Pad.

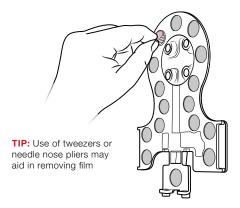


While holding upside down, align bottom of (A) Tab-Conn™ to be centered with the USB-C port of your tablet. Keep angled away to prevent adhesives from making contact with tablet. Once fully aligned, bring (A) Tab-Conn™ in to adhere to back of tablet. Press firmly and evenly for proper connection.

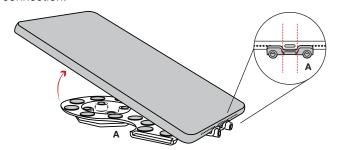

Connect straight end of (C) USB-C Cable into back of (A) **Tab-Conn**[™]. Connect 90-degree angle side of cable into the USB port of your tablet.

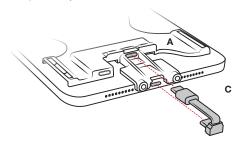

Insert (D) Cable Cover into back of (A) Tab-Conn™, clicking into place and covering USB connection.

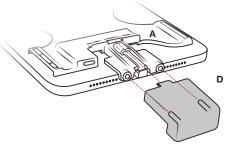


RPR-INS-GDS-TABC1B




Patented & Pats. Pend. rammount.com/ip

How to Disassemble

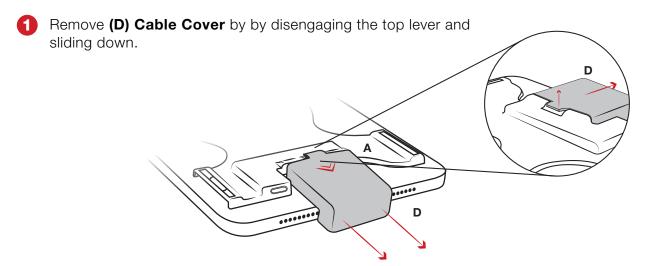

Remove (C) USB-C Cable from tablet port and (A) Tab-Conn™ port.

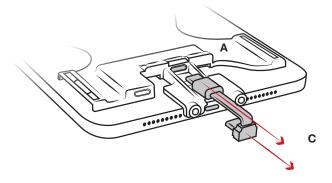

Using floss, fishing line (recommended) or a credit card, insert between **(A) Tab-Conn**[™] and tablet to gradually separate each adhesive from back of tablet. Use cleaner for any remaining adhesive residue.

