


Parts Index

* Not to scale




A

Ball Base



B

Wedge Assembly
(Size may vary)



C

#10-24 x 2" Screw



D

Wedge Nut

Size Guide

Measure the inside diameter of your motorcycle fork stem hole to determine correct **(B) Wedge Assembly**.



12-18.75mm

Small Wedges



18.75-25mm

Medium Wedges




25-32mm

Large Wedges


Assembly

- 1 Connect **(A) Ball Base** and **(B) Wedge Assembly** using **(C) Screw** and **(D) Wedge Nut**. Tighten until the internal wedge components engage with each other and the **(D) Nut** is not spinning loose.

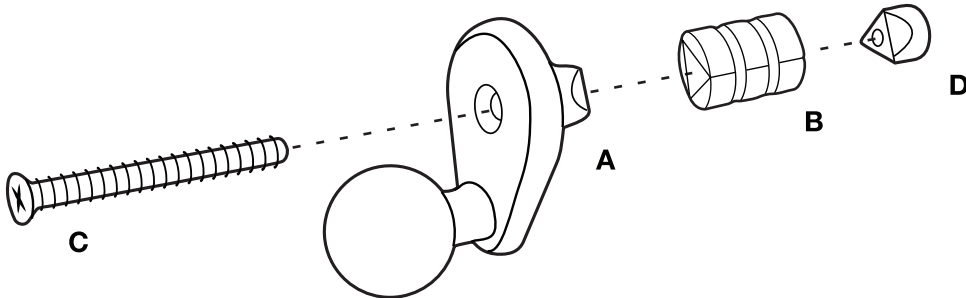


Installation

- 1 Insert in your motorcycle fork stem hole and fully tighten.

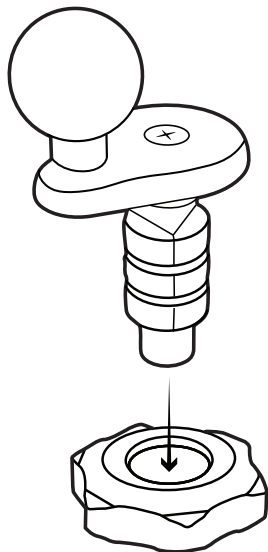

COMPLETED VIEW

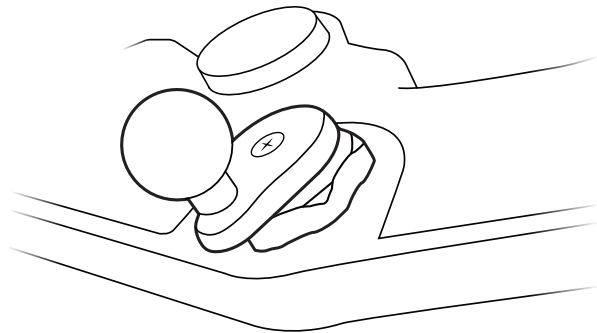

WARNING: Periodically check fitment of base connection. Vibration of motorcycle may cause loosening upon initial installation, where further tightening may be needed.

RMR-INS-B-342W



Safety Precaution

Do not install this product near or over an airbag deployment area or in a location that obstructs the driver's vision or interferes with vehicle operation. Electronic devices attached to this product are not to be used while vehicle is in motion. National Products, Inc. does not assume responsibility or liability for any such personal injury, death, or property damage.