




Please read through these instructions
Carefully prior to installation.



Scan or click to watch the
video instructions


Parts Index

* Not to scale

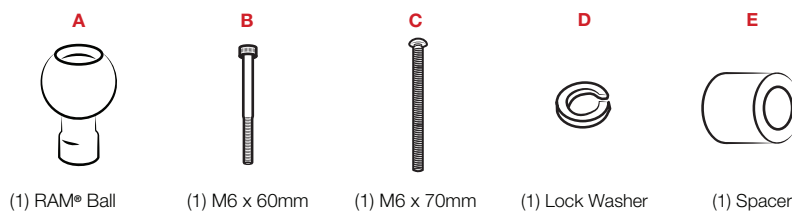


- 1 If necessary, gently pry open the grab handle panel to access the current grab handle bolt. Then, using the appropriate tools, remove the bolt in preparation for installing the new one.

*** In some vehicles, there may not be a grab handle panel to remove, and the *** location and appearance of the grab handle bolts can vary significantly.

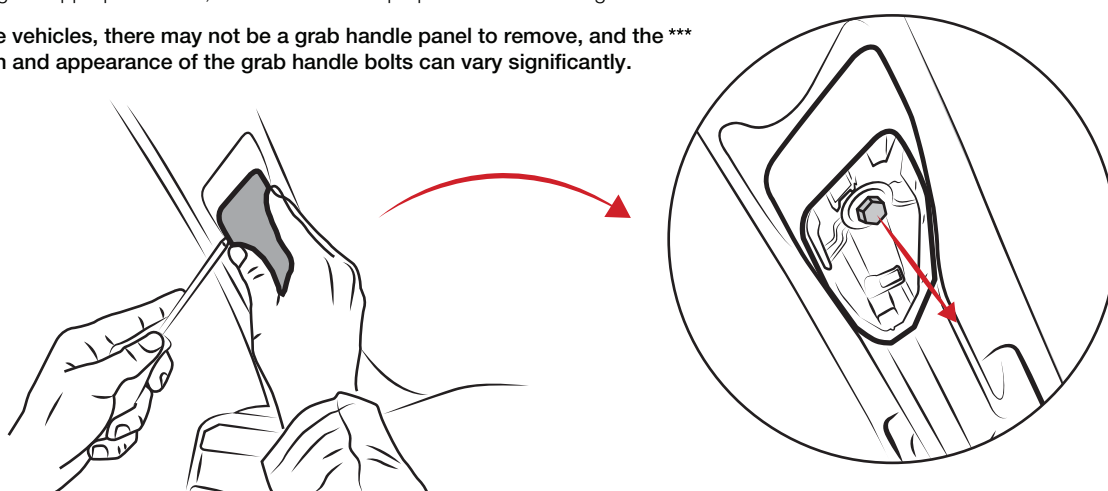

- 2 With the original grab handle bolt removed, attach the (A) RAM® Ball with (B or C) Bolt and (D) Lock Washer.

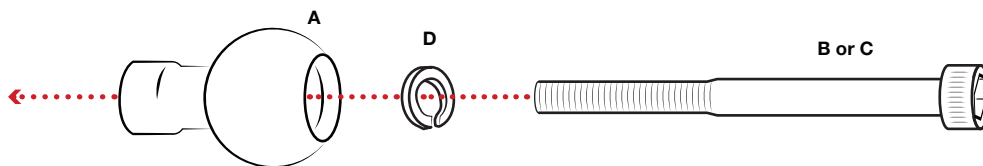


NOTE

For '21-23 Ford Bronco and '22 Toyota Tundra, use (B) 60mm Bolt

For Ford F-150, use (C) 70mm Bolt and (E) Spacer

For a cleaner look, consider drilling a hole into the grab handle panel if it is part of the removal process to fit the (E) Spacer.

*** Certain vehicles may not necessitate the use of the spacer at all.***

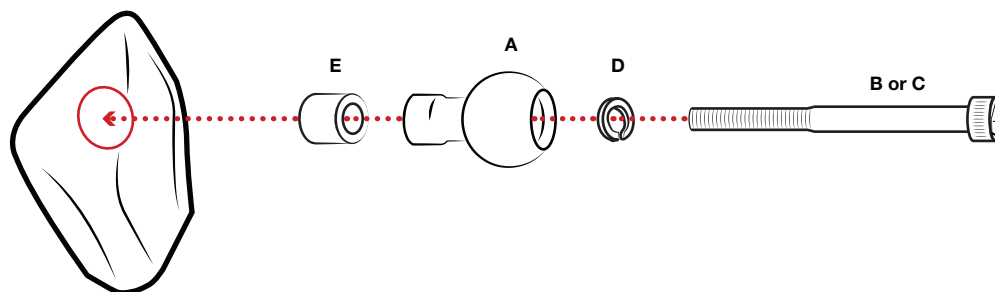

RMR-INS-B-367-M6



Safety Precaution

Do not install this product near or over an airbag deployment area or in a location that obstructs the driver's vision or interferes with vehicle operation. National Products, Inc does not assume responsibility or liability for any such personal injury, death or property damage.