SPECIFICATIONS

Placement

Passenger side on inner front and back seat studs

Drilling Required

No - uses existing seat bolts

Seat ConfigurationPole or PedestalBucket/BenchOrdered Separately

Construction/FinishSteel/Black Powdercoat

Weight
10.5 lbs.

Dimensions

A = 17.5", B = 11.68", C = 16.13" Hole Center = 14"

Features

Installs in minutes with no drilling required

Misc.

Rugged Steel Construction Lifetime warranty


Rugged Steel Construction

RAM Mounting Systems

8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com



RAM-VB-120-SW1

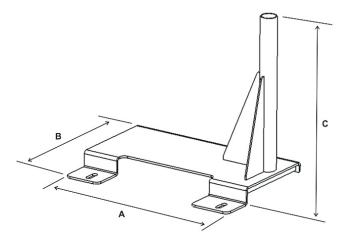

RAM-VB-120



RMR-INS-VB-120

INSTALLATION INSTRUCTIONS

- 1. Remove the seat bolts that hold the left side of the passenger seat to the floor.
- 2. Place mounting base next to the left side of the passenger seat.
- 3. Gently lift the inside of the seat upward to allow the seat frame to clear the studs.
- 4. Place the base between the seat frame and align the holes in the base with the seat studs.
- 5. Lower the seat back down over the no drill base and seat studs.
- 6. Fully tighten factory hardware to secure base in place along with seat frame.

RAM Mounting Systems

8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com



RMR-INS-VB-120