

Item Number _____

RAM-VB-135 & RAM-VB-135-SW1

RAM No-Drill™ Seat Bases

RAM Mounting Systems

SPECIFICATIONS**Placement**

Passenger side on the floor, under front seat

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Dimensions

A = 18.5", B = 7.5", C = 1.875"

Hole Centers = 15.875"

Pole or Pedestal

Sold Separately

Weight

5 lbs.

Features

Installs in minutes with no drilling required

Low profile keeps mount away from passenger leg space


Misc.

Rock solid construction

Lifetime warranty



RAM-VB-135-SW1

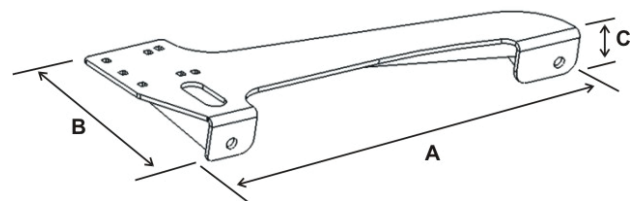

RAM-VB-135

RAM Mounting Systems

8410 Dallas Ave S

Seattle, WA 98108

Phone: (206) 763-8361

Fax: (206) 763-9615

www.rammount.com

support@rammount.com



RMR-INS-VB-135

Item Number _____

RAM-VB-135 & RAM-VB-135-SW1

RAM No-Drill™ Seat Bases

RAM Mounting Systems

INSTALLATION INSTRUCTIONS

Longer bolts, no stand offs

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts. Store these bolts.
2. Align the holes in the base and seat frame legs with those in the floor board. The pedestal platform should be near the console.
3. Pass the supplied longer bolts with washers through to the holes in the floor board and start the thread by hand.
4. Using a socket wrench, fully tighten the bolts to secure the no drill base into the vehicle.
5. After a week of use, check seat bolts and re-tighten if necessary.

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-135