

Item Number _____

RAM-VB-138 & RAM-VB-138-SW1

RAM No-Drill™ Seat Bases

RAM Mounting Systems

SPECIFICATIONS

Placement

Passenger side on the floor, under front seat

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Pole or Pedestal

Sold Separately

Construction/Finish

Steel/Black Powdercoat

Weight

7 lbs.

Dimensions

A = 17.125", B = 6.5", C = 5"

Hole Centers = 15.875"

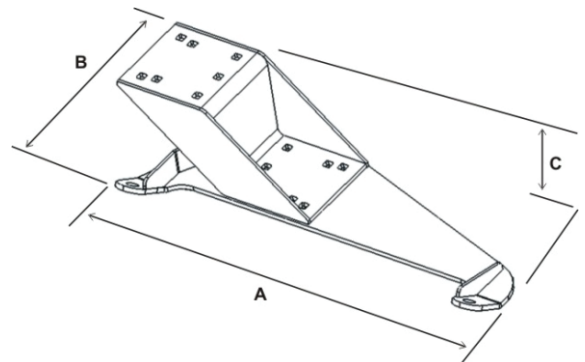
Features

Installs in minutes with no drilling required

Low profile keeps mount away from passenger leg space

Notes

The RAM-VB-138 will not fit BENCH SEAT MODEL TRUCKS

Product Number:
RAM-VB-138-SW1Product Number:
RAM-VB-138**RAM Mounting Systems**

8410 Dallas Ave S

Seattle, WA 98108

Phone: (206) 763-8361

Fax: (206) 763-9615

www.rammount.com

support@rammount.com



RMR-INS-VB-138

Item Number _____

RAM-VB-138 & RAM-VB-138-SW1

RAM No-Drill™ Seat Bases

RAM Mounting Systems

INSTALLATION INSTRUCTIONS

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts on the passenger side.
2. Without moving the seat, place the No-Drill™ base over the front of the seat frame legs.
3. Align the holes in the base with those of the seat frame legs. The pedestal platform should be near the console.
4. Re-install the seat bolts and fully tighten.



Photo of base installed into 2014 Tacoma crew cab.

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-138