

Item Number _____

RAM-VB-161R & RAM-VB-161R-SW1

RAM No-Drill™ Seat Bases

RAM Mounting Systems

SPECIFICATIONS

Placement

Passenger side, in front, where seat frame meets floor board.

Drilling Required

None - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Pole or Pedestal

Ordered Separately

Dimensions

A = 18.375", B = 2.75", C = 5.5"
Hole Centers = 16.5"

Weight

6.9 lbs.

Features


Installs in with no drilling required
Won't interfere with levers or factory-installed console

Misc.

Lifetime warranty



Laptop Vehicle System:
RAM-VB-161R-SW1

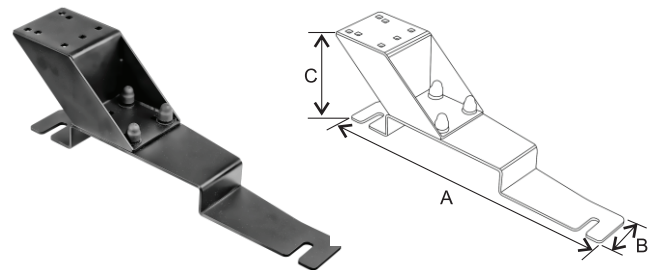

Vehicle Base:
RAM-VB-161R-SW1

RAM Mounting Systems

8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-143

Item Number _____

RAM-VB-161R & RAM-VB-161R-SW1

RAM No-Drill™ Seat Bases

RAM Mounting Systems

INSTALLATION INSTRUCTIONS

For some models, it will be necessary to remove the plastic trim over the seat leg bolts. For the 2011 Ford Flex. The longer bolts supplied in this kit will allow the base to clear the under seat air duct. Once trim is removed, store it for reinstallation should the no drill base be later removed.

Note that if you are going to use the supplied riser, pass the carriage bolts up through the base and use a small piece of tape on the round heads to hold them in place during installation. Once the base is in place, align the holes in the riser with the bolts and pass it down over them. Finish securing the riser in place with the supplied washers, nuts, and finish with the rubber nut caps.

1. Using a 13MM socket, remove the seat leg bolts that hold the seat frame legs to the floor board.
2. Place the stand offs supplied over the holes in the seat frame legs.
3. Place the No-Drill™ base on top of the stand offs.
4. Pass the supplied longer bolts through the flat washers, through the No-Drill™ base, and through the stand off.
5. Start threading the bolt by hand. Once the bolt has been threaded into the floor pan several turns, finish securing the base into the vehicle with the socket wrench. Fully tighten. After a week of use, check seat leg bolts and re-tighten if necessary.



RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-143