

Item Number
RAM-VB-177

RAM No-Drill™ Seat Bases

RAM Mounting Systems

SPECIFICATIONS

Placement

Passenger side where seat frame legs meet the floor board.

Drilling Required

No - requires longer bolts and stand offs provided in kit.

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Pole or Pedestal

Purchased Separately

Weight

4.5 lbs.

Dimensions

A = 17.63", B = 8.21", C = 1.18"

Hole Center = 10.75"

Features

Installs with no drilling required
Minimal intrusion into passenger leg space

Misc.


Rock solid construction
Lifetime warranty

RAM Mounting Systems

8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



Shown In Use

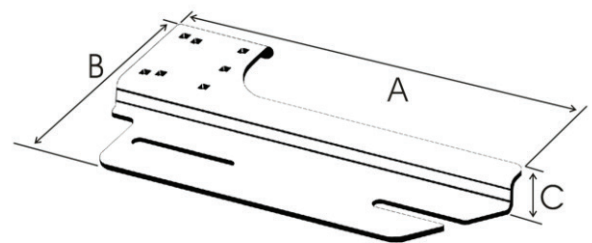

RAM-VB-177



RMR-INS-VB-177

Item Number
RAM-VB-177

RAM No-Drill™ Seat Bases

RAM Mounting Systems

INSTALLATION INSTRUCTIONS

1. Move the passenger seat back to its rearmost position and remove the two front seat rail bolts. These are found holding the front of the passenger side seat frame legs to the floor board. Do not discard these bolts. Save them for use should you later remove this product from the vehicle.
2. Should you choose to use the optional riser, attach it to the No-Drill™ base now.
3. Take the longer seat leg bolts provided and pass each through the flat washer. Next, pass the bolt through the slots of the No-Drill™ base.
4. Place the stand offs over the holes where the factory seat leg bolts were previously.
5. Lower the No Drill base down over the stand offs, pass the bolts through the stand offs, and into the threaded holes in the floor board. Start the thread by hand.

Once both bolts have been started by hand, use a wrench to fully tighten these bolts and secure the base until rigid.

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-177