

Vehicle Compatibility:

2015 Chevrolet Silverado 1500
with 40/20/40 Bench Seat

Specifications

Placement

Across Transmission Hump

Seat Configuration

Bucket/Bench. Base will not work in vehicles with full console that extends up to dash. Product was designed for the Chevy Work Truck.

Drilling Required

No drilling - uses existing console bolts on vehicles.

Construction/Finish

Steel/Black powder coat

Dimensions



A = 16.875", B = 10", C = 3.75"

Pole or Pedestal

Ordered separately

Weight

6.7 lbs.

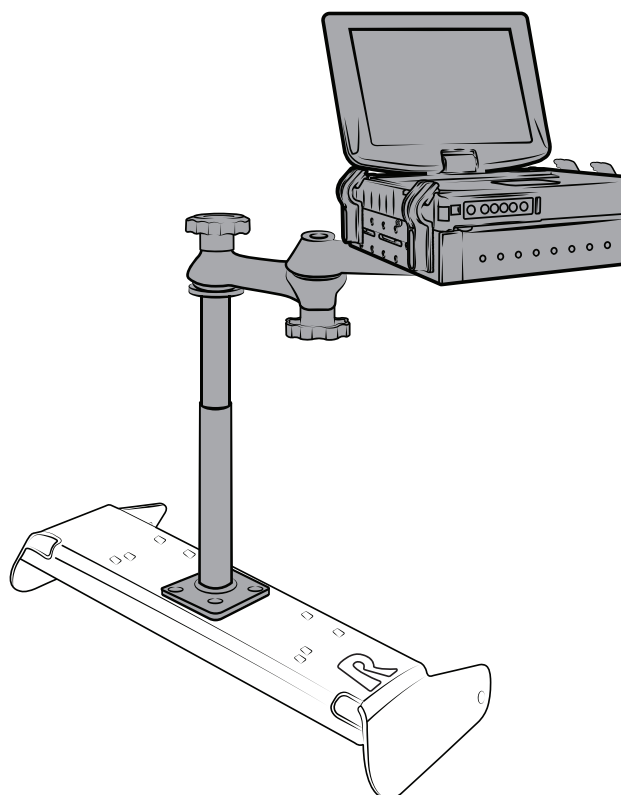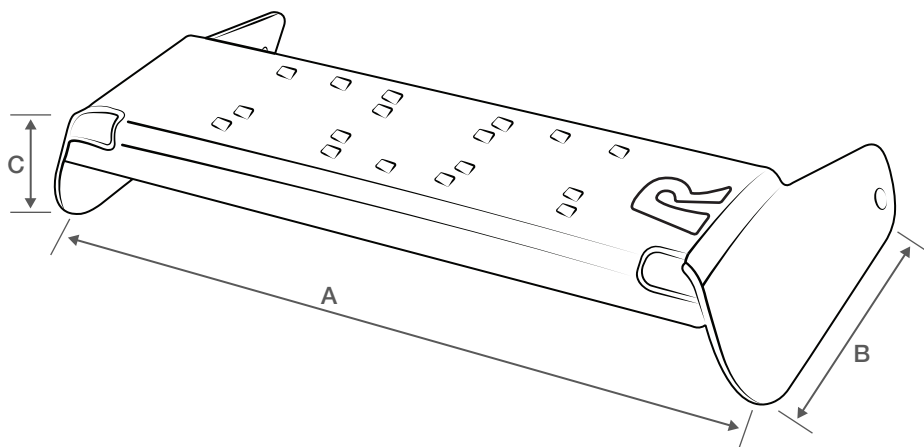

Important Note

The RAM-VB-191 is recommended for the Chevrolet Silverado 1500 with 40/20/40 bench seat and no pass through console. For all other Chevrolet Silverado 1500 models refer to the **RAM-VB-193**. This product will not install properly into trucks with the 4x4 lever on the center hump of the vehicle.

RMR-INS-VB-191



Safety Precaution


Do not install this product near or over an airbag deployment area or in a location that obstructs the driver's vision or interferes with vehicle operation. National Products, Inc does not assume responsibility or liability for any such personal injury, death or property damage.

Installation Instructions




Note: Prior to attempting installation, please make sure your vehicle mounting points and vehicle layout match those depicted in the images below. If your vehicle does not match, this product will not install properly.

- 1 Place both front seats in their most rear position.
- 2 Remove the plastic trim caps using a small screw driver. These are located at the lower front of the center seat/console. Store and save these covers for later use should the base be removed.
- 3 Using a 15MM socket, remove the bolts found under the plastic trim caps. Store and save these bolts for later use should the base be removed.
- 4 Place one of the supplied steel tube stand off's inside each opening over the threaded hole.
- 5 Place the no drill base so that it bridges the center hump. Align the holes in the no drill base with the stand off's on each side of the console.
- 6 Place the flat washer over the M10 bolt, place through the no drill base and stand off. Start thread by hand.

Plastic Trim Cap

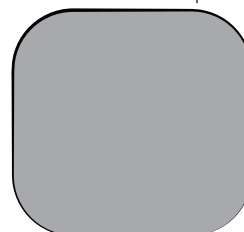

After removing Plastic Trim Cap

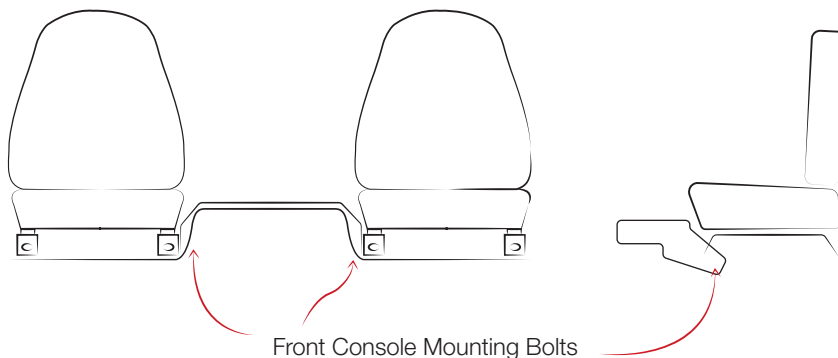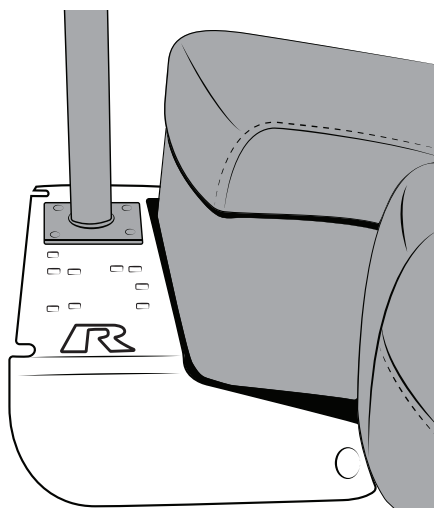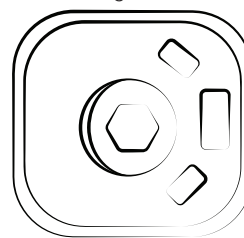

RMR-INS-VB-191



Safety Precaution

Do not install this product near or over an airbag deployment area or in a location that obstructs the driver's vision or interferes with vehicle operation. National Products, Inc does not assume responsibility or liability for any such personal injury, death or property damage.