

Item Number
RAM-VC-LEG-110

RAM Console Leg Kits

RAM Mounting Systems

Console Leg Kit for the
CHEVROLET SUBURBAN (2010-2012)
CHEVROLET TAHOE (2010-2012)
GMC YUKON/YUKON XL (2010-2012)

SPECIFICATIONS

Drilling Requirements:

For some vehicles, drilling may be required. See vehicle specific kits for No-Drill™ applications and universal for all others.

Finish:

Black Powder Coating

Placement:

Over transmission hump

INSTALLATION REQUIREMENTS

The area between the front seats must be accessible in order to mount the leg kits and top plates to support a console.

The area must be open between bucket seats or, if the vehicle has a 40/20/40 front bench seat or similar configuration, the center section must be removed.

If the vehicle has a floor mounted shifter, either automatic, manual, or 4x4 lever, make sure there is ample room to the rear of the shifter and the floor board is clear before making a RAM-VC-LEG kit selection. The installed RAM-VC-LEG kit should be installed in a manner that does not interfere with the operation of shifters or levers.

For some vehicles, there may be room between the center of the bench seat front and the dash of the vehicle. If removing the center section of the bench seat is not an option, but there is room at this location, consider the universal leg kit, short top plate, and short console box as a possible solution.

If the vehicle is equipped with a factory installed center console, make sure it can be removed without :

1. Permanently disabling the vehicle.
2. Exposing sensitive electrical equipment to harm.
3. Exposing mechanical systems to harm.
4. Interfering with factory installed safety equipment.

Some factory installed equipment and consoles cannot be removed. If this is the case for your vehicle, consider other RAM products designed for mounting electronics safely and securely in your vehicle.



RAM Mounting Systems

8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VC-LEG-110

Item Number
RAM-VC-LEG-110

RAM Console Leg Kits

RAM Mounting Systems

Console Leg Kit for the CHEVROLET SUBURBAN (2010-2012) CHEVROLET TAHOE (2010-2012) GMC YUKON/YUKON XL (2010-2012)

SPECIFICATIONS

Drilling Requirements:
No drilling required

Finish:
Black Powder Coating


Placement:
Over transmission hump

INSTALLATION INSTRUCTIONS

The purpose of this instruction sheet is to illustrate the manufacturer's recommended method of installation for the RAM-VC-LEG-110 Leg Kit that includes anchor legs and a bagged hardware kit. Suggested tools for vehicle hardware: 15MM and 11MM socket and ratchet wrench. Please completely read these instructions before beginning installation. Take note of duct work and wiring under seats before beginning work. Use caution when moving seat during installation..

Step 1: Assemble top plate and legs

1. Remove the plastic trim covering the seat leg hardware at the front of the seats. Remove the nuts.
2. Slide the seats to their most forward position. Remove the plastic trim covers over the rear seat leg bolts. Remove the rear seat bolts.
3. Place front and rear seat legs under the drivers and passengers side seats. Do not replace hardware yet. Place top plate over seat legs and mark the slots that the leg kit will use in your top plate. Note that the "R" should be at the back. Remove the top plate and seat legs from the vehicle.
4. Attach the seat legs to the top plate using the hardware provided. Place the legs at the slots marked in the previous step. The round head of the carriage bolt should be outside. Fully tighten the hardware.
5. Gently lift the passenger and drivers seats up enough to clear the assembled top plate with leg kit. Place the assembly over the seat studs at front and over the seat bolt holes in the rear. Lower the seats back to their original position. Before replacing the seat leg hardware, place the large flat washer over the door side rear and door side front mounting stud and hole. These act as shims to level seat after installation of the leg kit.
6. Replace and fully tighten the seat leg mounting hardware. Replace seat leg trim covers.

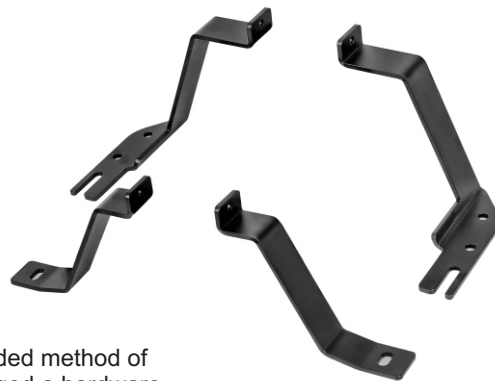

Disclaimer regarding mounting of product:

National Products Inc. and/or RAM Mounting Systems is not liable under any theory of contract or tort law for any loss, damage, personal injury, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicles or any other application. In order to safely install and use RAM Mounting System or National Products Inc. products full consideration of vehicle occupants, vehicle systems (i.e. the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. RAM Mounting Systems and National Products Inc. specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufacturers specifications and recommendations.

RAM-VC-LEG-110 (Leg Kit)
shown attached to
RAM-VC-TP-29 (Top Plate)

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VC-LEG-110

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.