


Patented & Pats. Pend.




Scan Here for  
GDS® General Care  
& Maintenance


- 1** Insert bottom corners of your phone into the center of IntelliSkin®, aligning power port with inside charging connector.

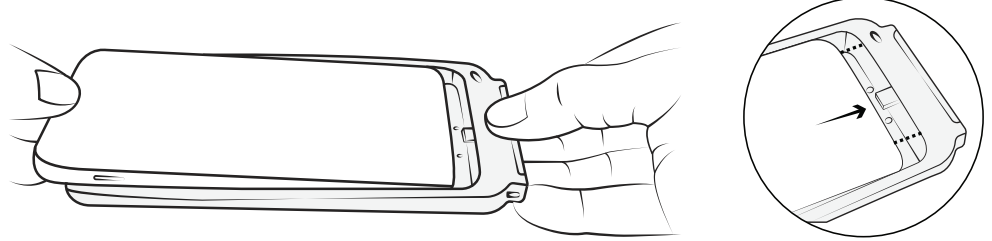


- 2** While gripping bottom contacts of IntelliSkin®, carefully guide inside charging connector into your phone.

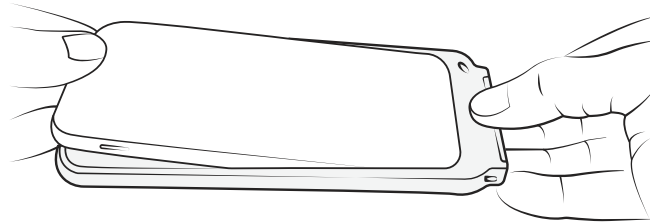

- 3** Press top corners of phone into top of IntelliSkin® to secure in place.

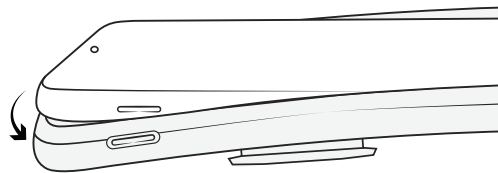

- 4** Starting from the bottom of the phone, insert lens cover into the front edges of the IntelliSkin®. Gradually wrap around edges until fully seated & sealed.

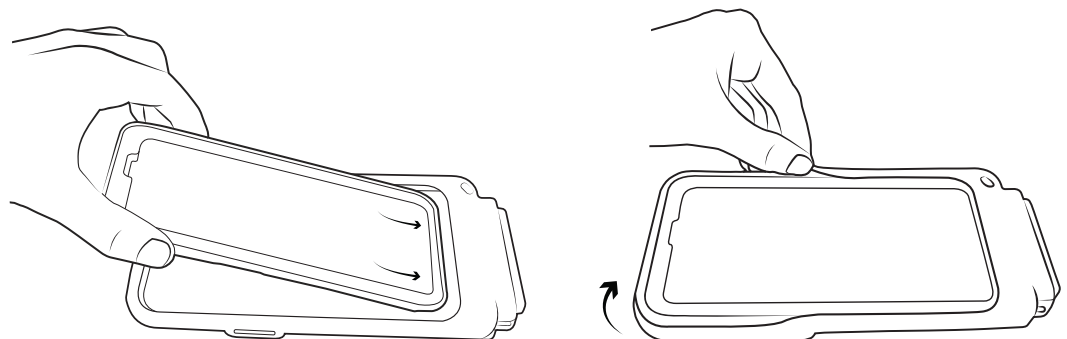

3 year warranty on all electronic components / Lifetime Warranty on all non-electronic components

RPR-INS-GDS-SKIN-G

## Troubleshoot

Follow these steps if you encounter any charging issues with your GDS® Dock™

- Verify that the dock's power cord is securely plugged into the dock as well as the wall power source. Ensure that the power source is functional by testing with an alternate electronic device.
- Verify that the IntelliSkin® connector is securely connected to your device.
- Verify that the IntelliSkin® is seated properly in the receptacle of the GDS® Dock™.
- After verifying the above steps, see GDS® General Care and Maintenance above to verify that your dock and IntelliSkin® have been properly cleaned.